

See discussions, stats, and author profiles for this publication at: <https://www.researchgate.net/publication/322481082>

Structural Characterization of Rolled-up GaAs/In_{0.2}Ga_{0.8}As Multilayer Tubes by Coherent Phonon Spectroscopy

Conference Paper · March 2017

CITATIONS

0

READS

19

6 authors, including:



Martin Grossmann

Universität Konstanz

25 PUBLICATIONS 143 CITATIONS

[SEE PROFILE](#)



Oliver G Schmidt

Leibniz Institute for Solid State and Materials Research Dres...

984 PUBLICATIONS 24,184 CITATIONS

[SEE PROFILE](#)

Some of the authors of this publication are also working on these related projects:



Quantum Rings [View project](#)



Opto-acousto-optic imaging of material elasticity at high pressures [View project](#)

Structural Characterization of Rolled-up GaAs/In_{0.2}Ga_{0.8}As Multilayer Tubes by Coherent Phonon Spectroscopy

D. Brick,^{1(a)} Y. Guo,¹ M. Grossmann,¹ V. Engemaier,² G. Li,² D. Grimm,²
O.G. Schmidt,² M. Schubert,¹ V.E. Gusev³, M. Hettich,¹ and T. Dekorsy^{3(a)}

¹Department of Physics, University of Konstanz, 78464 Konstanz, Germany

²Institute for Integrative Nanosciences, IFW Dresden, Helmholtzstrasse 20, 01069 Dresden, Germany

³LAUM, UMR-CNRS 6613, Université du Maine, Av. O. Messiaen, 72085 Le Mans, France

⁴Institute of Technical Physics, German Aerospace Center, Pfaffenwaldring 38-40, 70569 Stuttgart, Germany

Rolled-up crystalline multilayers are promising candidates for a wide range of applications in a number of interdisciplinary fields such as in fluid transportation, thin film transistors or thermoelectric devices,^{1,2} as well as for microtube lasers³. Here, the radial geometry of the structures itself but also the simplicity of the fabrication process⁴ compared to conventional techniques makes this type of superlattice especially appealing. It is not necessary to grow the full layer stack by molecular beam epitaxy (MBE) but instead by growth of a strained bilayer which rolls up upon release from the substrate and forms a multilayer roll. Additionally there is the possibility to use novel materials and material combinations which remain challenging for usual growth techniques⁵. A detailed characterization of these structures is necessary to establish a better understanding of their mechanical properties including the adhesion between the individual windings.

We investigated the acoustic phonon modes with asynchronous optical sampling⁶ in rolled-up multilayers experimentally and theoretically. The thickness of the layers are in the nanometre range and diameters of the tubes in the micrometre range. The results are compared to plane, unrolled multilayers grown completely by MBE. For these samples the experimentally obtained modes show characteristics of a superlattice and match well to calculations obtained by the Rytov model. In contrast, the rolled-up superlattice tubes exhibit differences compared to the plane structures. The modes cannot be described anymore by the Rytov model due to imperfect adhesion. By using a transfer matrix method where a massless spring is included which accounts for the imperfect adhesion between the layers a good agreement between experiment and calculations is achieved for up to five windings. This allows us a spatially resolved characterization of individual multilayer tubes with micrometre spatial resolution where areas with varying interface adhesion can be identified.

References:

- [1] D. Grimm et al, *Nano Lett.* **2012**, 13, 213.
- [2] C. Deneke et al, *Journal of Physics D: Applied Physics* **2009**, 42, 103001.
- [3] F. Li and Z. Mi, *Optics Express* **2009**, 17, 19933-19939.
- [4] O.G. Schmidt and K. Eberl, *Nature* **2001**, 410, 168.
- [5] C. Deneke et al, *Appl. Phys. Lett.* **2004**, 84, 4475.
- [6] O. Ristow et al, *Appl. Phys. Lett.* **2013**, 103, 233114.

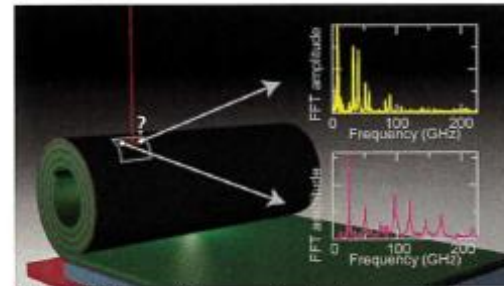


Fig. 1: Scheme of the sample structure excited by a laser pulse. Possible acoustic phonon modes of the multilayer tubes are shown in the Fourier transformations on the right.